

SAMURAI TIPS

HOW TO CREATE "TRUCK BED"

SAMURAI
くろぶし 黒武士

THE STEPS:

Prepare the surface

- Use a wet sandpaper with 400 grits and thoroughly rub on the surface of the project. Then clean it with Geigi Motorcycle Shampoo (CM07).
- Use Undercarriage Epoxy 2K08 as an undercoat and PU Truck Bed 2K07 as a top coat.

Undercoat



Spray 2K08 on the body part to provide maximum protection and let it dry for few minutes.
Distance for first layer is 1.5ft
Distance for second layer is 2.5ft

Top Coat




Then, use 2K07 as a protection against the UV rays.
Distance for first layer is 1.5ft
Distance for second layer is 2.5ft

USER ERROR



Make sure the distance used for 2K08 & 2K07 is 1.5ft for the first layer and 2.5ft for the second layer.

Parts that can be sprayed:

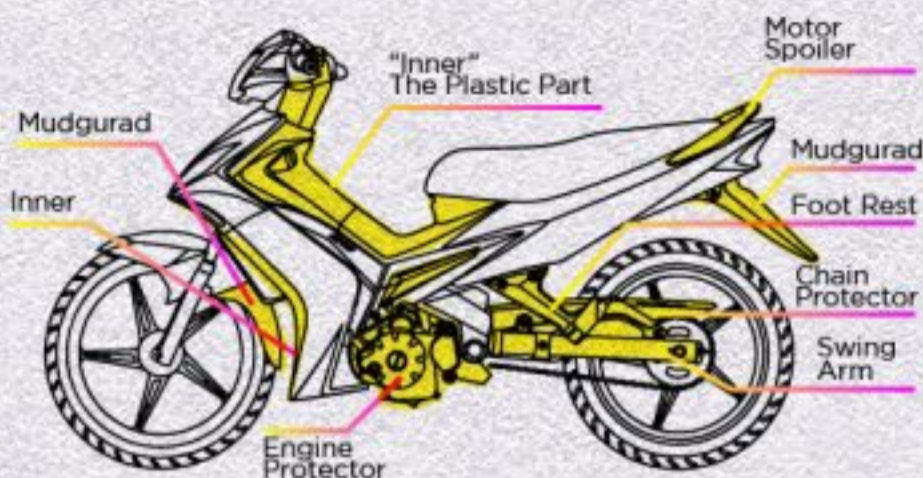

LAYERS:



PRODUCTS:



RESULT:



SAMURAI PAINT
SUBSCRIBE

UNLEASH YOUR CREATIVITY!

SAMURAI TIPS

THE DIFFERENCES OF 2K07 & 2K08




SAMURAI TRUCK BED



UNDERCOAT: 2K08
**UNDERCARRIAGE
EPOXY**

TOP COAT: 2K07
**POLYURETHANE
(PU)**

Parts that can be sprayed:

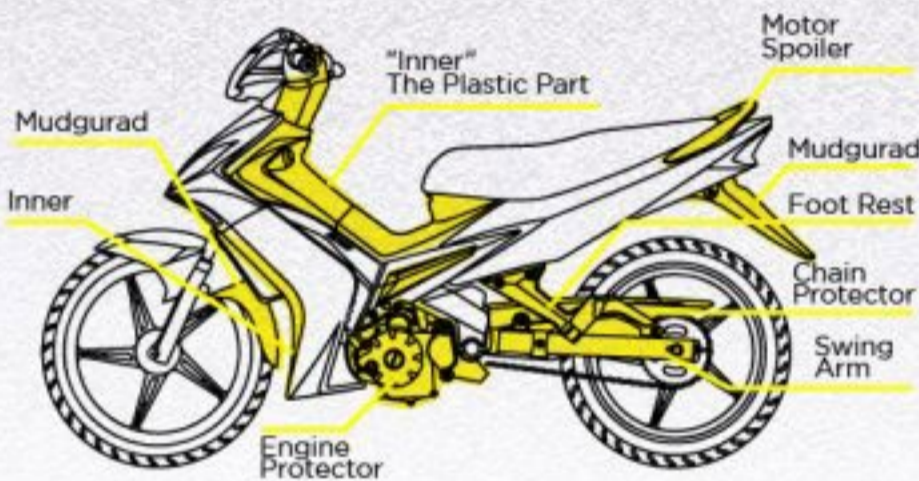

LAYERS:



DIFFERENCES & BENEFIT:

2K08 (UNDERCOAT) **UNDERCARRIAGE EPOXY**



- For parts needing extra protection.
- Permukaan Kesat.
- Anti rust.
- Chemical protection & scratch resistant.
- Abresion protection.

2K07 (TOP COAT) **POLYURETHANE (PU)**



- For parts exposed to UV radiation.
- Granular Texture.
- UV protection to avoid color from feading and erosion.
- Protection againts scratches, minor dents and high impact.



SAMURAI PAINT
SUBSCRIBE

UNLEASH YOUR CREATIVITY!